

CycloneX10 USB

Instruction manual

 
WOH-0018

Contents

- Important safety instructions
- Parts identification
- Before using the appliance
- How to use the appliance
- After using the appliance
- Maintenance
- Trouble shooting
- Specifications
- Customer support

Supplied items



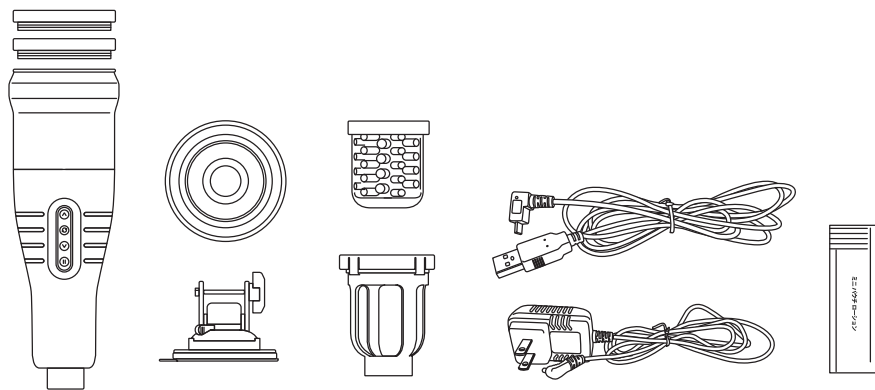

Body, USB cable, AC Adapter, CupPart(Spacer cup×2, Front ring, Outer cup, Inner cup, Transparent shield), Fixing sucker, Mini Pouch Lotion





Cyclone
X10
USB





Important safety instructions





To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precaution. Read all instructions before using the product.

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed					
	DANGER	Denotes a potential hazard that will result in serious injury or death		Caution	Denotes a potential hazard that will result in serious minor injury
The following symbols are described that have to protect it					
	This symbol denotes that must not be performed				This symbol denotes that must be followed


 DANGER					
 Obey	●Consult your doctor if you receive medical treatment or listed below. <ul style="list-style-type: none">• The person who have medical care appliance for body embedding such a pacemaker.• The person who have malignant tumor.• The person who have cardiac disorder.• The person who have sensitivity to temperature.• The person who have sensory abnormality caused by peripheral circulatory disturbance from diabetes.• The person who have wound at the object parts.• The person who don't feel well or need rest• The person who's temperature is more than 36. Ex: The period acute inflammation or extremely weak.• The person who have osteoporosis, spinal fracture, sprain, pulled muscle or acute pain.• The period of time when you feel something strange in body parts. *If the important points haven't been obeyed, there is the possibility of getting hurt.				
	●When you feel something strange in body parts, you should stop to use and consult the doctor. *If the important points haven't been obeyed, there is the possibility of having poor health.				
	●Confirm if there are any loose points or out of place in the parts before use it If there is any problem, you should stop to use and request to repair. *Failure to do so may cause electric shock, or injury.				
	●Always turn off the main switch and locks the operation panel after use it. *Failure to do so may cause injury by child's mischief.				
	●Use only with 100 volt electrical systems. *Do not use with voltage converter or in overseas. *Failure to do so may cause fire, electric shock, or injury.				
	●Periodic cleaning of power plug *Failure to do so may cause fire in order to insulation failure. Clean the power plug only with a soft cloth.				

Important safety instructions

 DANGER	
 Prohibition	<p>●Do not use the following person.</p> <p>• The person who is hard to feel sensitivity to temperature or pain.</p>
	<p>●The person who forbidden by doctor to have a massage never use it.</p> <p>Ex: Thrombosis, severe aneurysm, acute varix, skin inflammation, skin infection.</p> <p>*Failure to do so may symptoms get worse.</p>
	<p>●Do not let the person who can not declaring one's intentions or can not operate by oneself.</p> <p>*Doing so may cause injury.</p>
	<p>●Do not let children use it or use near them.</p> <p>*Doing so may cause injury.</p>
	<p>●Do not stand or ride on the main body.</p> <p>*Doing so may cause injury.</p>
	<p>●insert a finger in the space between inner cup and outer cover.</p> <p>*Doing so may cause injury.</p>
	<p>●Do not wrap the cord around the main body.</p> <p>*Doing so may cause the wire in the cord to break with the load, and may cause electric shock or fire.</p>
	<p>●Not damage to the power supply cord or plug.</p> <p>• Never allow it to be pulled, twisted, or severely bent.</p> <p>• Do not use with the cord bundled.</p> <p>• Do not put or insert heavy weight on the main body.</p> <p>*Doing so may cause electric chock or fire due to a short circuit.</p> <p>Contact an authorized service center for repair.</p>
 Don't break up	<p>●Do not attempt to make any repairs yourself. Do not touch the internal working of the appliance.</p> <p>*Failure to do so may cause injury, contact an authorized service center for repair.</p>
 Don't use with a wet hand	<p>●Do not connect or disconnect the power plug to a household outlet with a wet hand.</p> <p>*Doing so may cause electric shock or injury.</p>

 Caution	
 Obey	<p>●Need to confirm operating normally about switch according to each instruction manual before use it</p> <p>*Failure to do so may cause injury.</p> <p>●Please use starting from the low-speed mode at first.Don't use more than 20minutes continuously.</p> <p>*Failure to do so may cause injury.</p> <p>●Immediately stop using and remove the power plug If there is an abnormality or failure</p> <p>*Failure to do so may cause fire, electric shock, or injury.</p> <p>●Disconnect the power plug by holding onto it instead of pulling on the cord</p> <p>*Failure to do so may cause fire, electric shock, or injury.</p> <p>●Confirm a foreign substance between a main body and cup</p> <p>*Failure to do so may cause injury.</p> <p>●If it have not been used it a long period of time, confirm there is an abnormality or failure in cord. And confirm operating normally and safety before use it</p> <p>*Failure to do so may cause injury.</p> <p>●Do not store the appliance</p> <p>*Failure to do so may cause fire, electric shock, or injury.</p> <p>●Do not suspend it with hold the cord or whirl. And do no use it with press down the power supply cord by main body or a chair</p> <p>*Failure to do so may cause fire, electric shock, or injury.</p> <p>●Do not operate under blanket or coverlet.</p> <p>*Excessive heat may develop and cause fire.</p> <p>●Do not sleep while using it</p> <p>*Failure to do so may cause injury.</p>
	<p>●Do not spill the water or green tea, or do not damage it</p> <p>*Failure to do so may cause fire, electric shock, Stop use it immediately and contact customer suport.</p> <p>●Do not use an area with humidity like bathing</p> <p>*Failure to do so may cause fire.</p>
 Don't use it near water	
 Unplug	<p>●Always unplug it and USB cable after using.</p> <p>*Failure to do so may cause fire.</p> <p>●Disconnect the power plug and USB cable, when taking care it</p> <p>*Failure to do so may cause fire, electric shock, or injury.</p> <p>●Disconnect the power plug and USB cable, when being a blackout</p> <p>*When the blackout is over, it may cause fire, electric shock, or injury.</p>

 
Parts identification

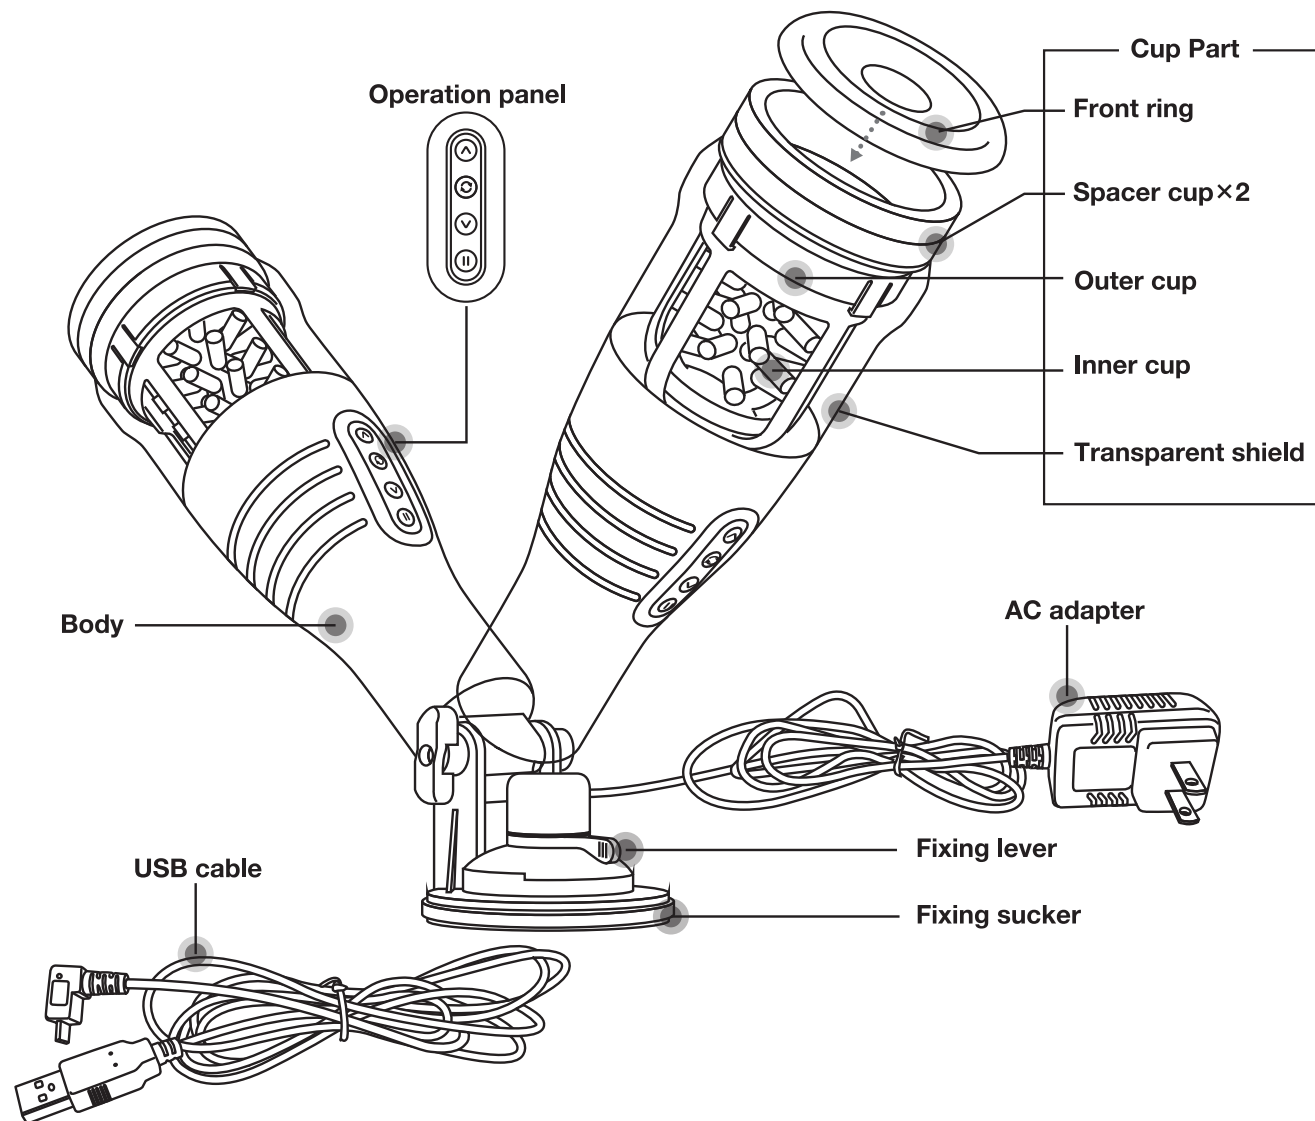

Before use


1. Decide location of use

 - Hold by hand or fixing sucker in flat surface.

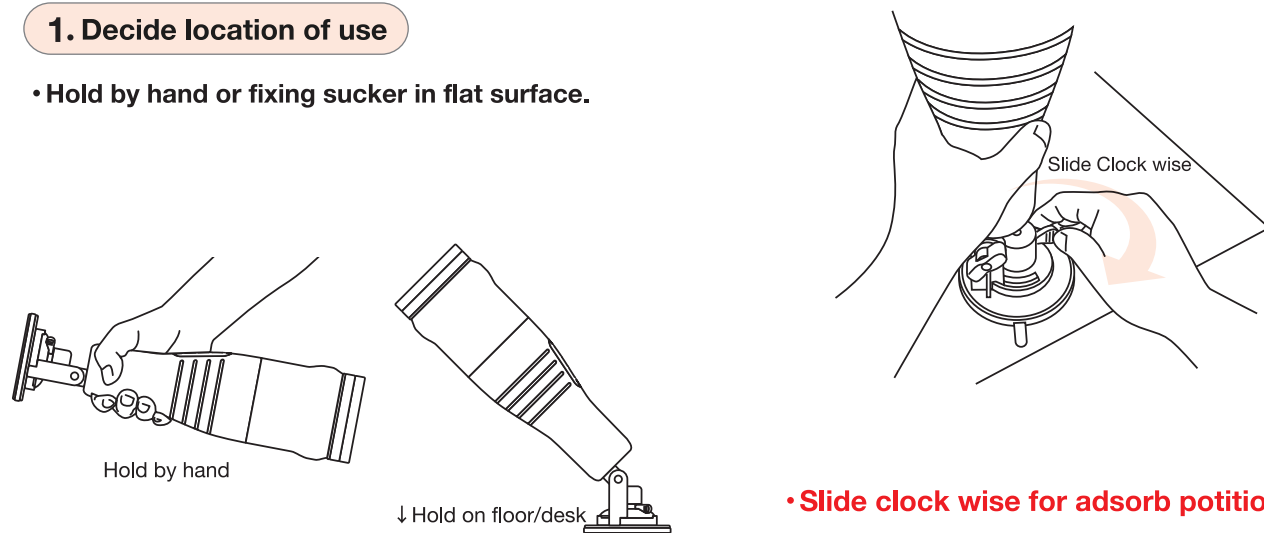


- Slide clock wise for adsorb position.
- Prevent excessive force in fixing position

 - Please keep away from electric product, AV and OA equipment such as TV or Radio, at least 1m. It can be caused by electromagnetic noise.

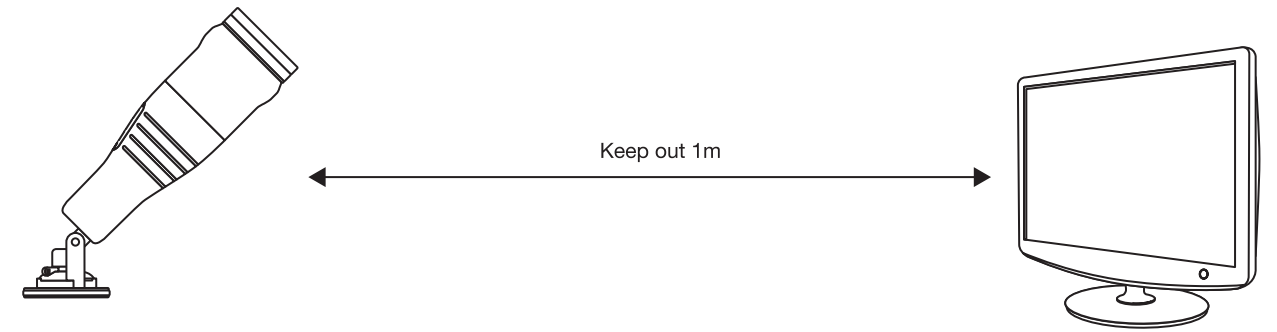


2. Prepare the Original Cup and Lubricants to START

 - Make sure Inner Cup and Outer Cup is completely connected.

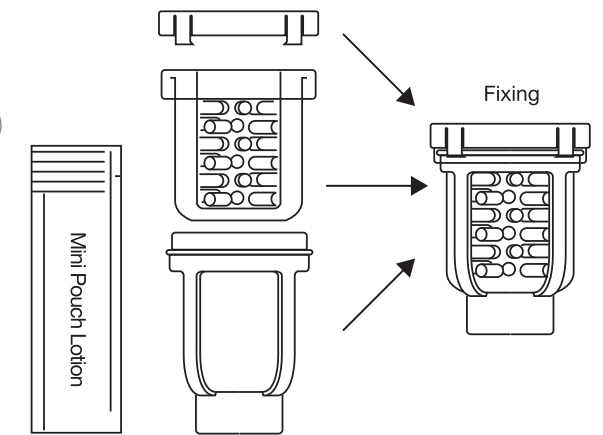


3. Secured Power

 - This product is available to play in both ways: plugged OR unplugged AC adapter
- Please charge the battery FULL before use this Product.
- Use only Provided AC adapter.

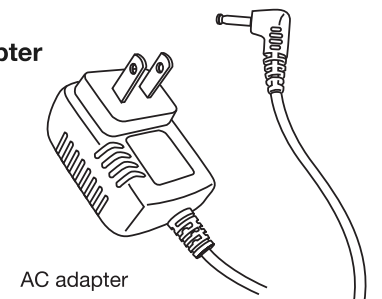

4. How to Set Up

 
- This product is available to use with holding it by hand or use suction cup to lock the product in place.
- Be make sure there are no obstacles around AC adapter or USB cable.
- Use suction cup where flat, hard and clean place. And make sure suction cup stuck firmly before using.

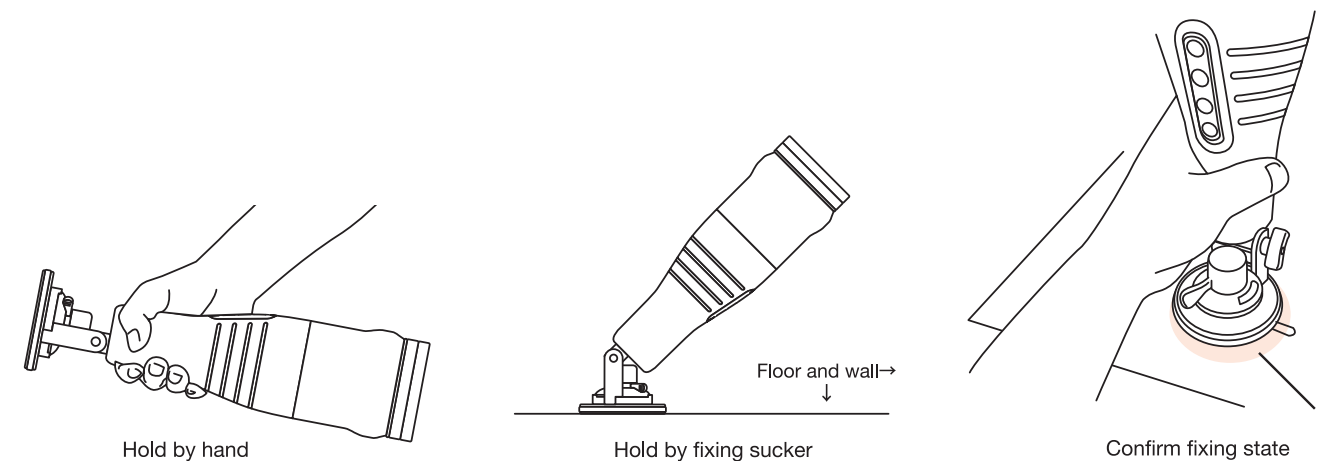


Before using the appliance



How To use the item itself

 1. Standby mode

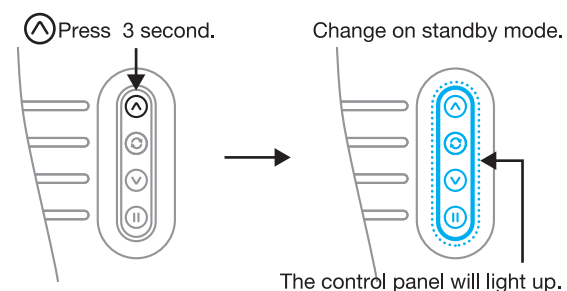- Press  button about 3 second.
- The control panel will light up and the light color change on standby mode.

 


2. Start to rotation


- The Cyclone X10 starts with slow rotation when pressed  button in standby mode.
- Press and control by  button, to changes the rotation speed.
- Don't return standby mode in immediately after starting rotation.


Press  for stop temporarily→4

Long press  for stop 5 seconds for stop→5

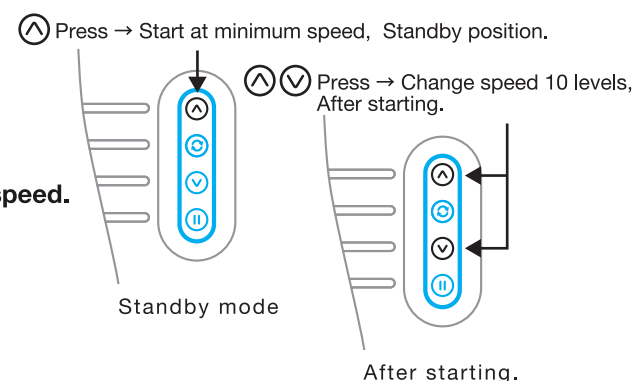



 
3. Various pattern of Rotation

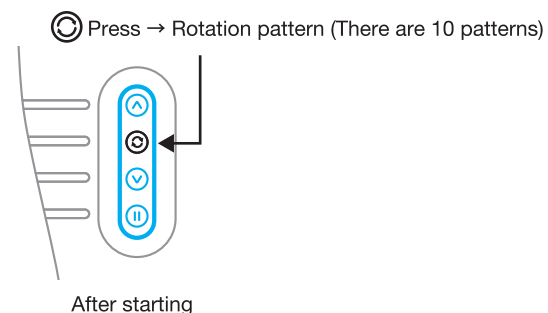- Press the  button to change rotation patterns.
- Press button repeatedly to cycle through ten rotation pattern. (There are 10 patterns).



4. Pause rotation.

 
- Press  button once to pause.
- Press  again to continue.

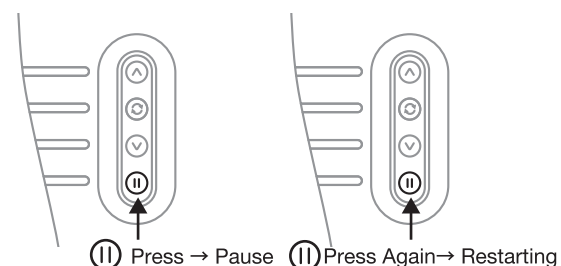

5. To Turn OFF

- The power is turned off by holding the  button for 5 seconds.

 *When the AC adapter is connected, LED will remain lights up and charging is started.

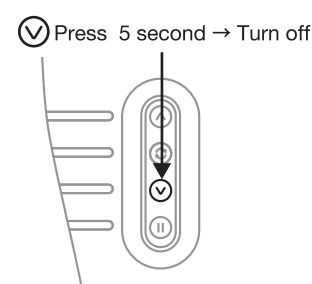


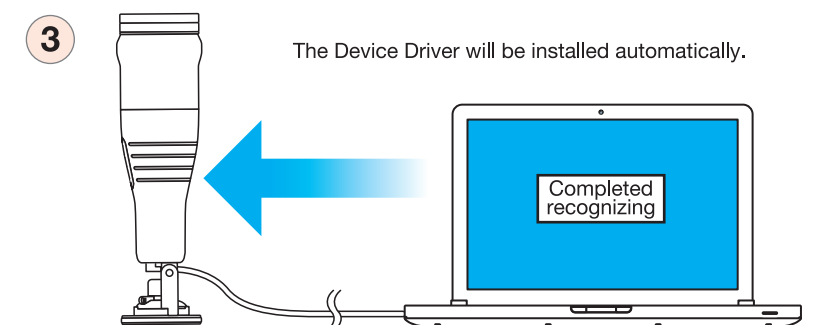 
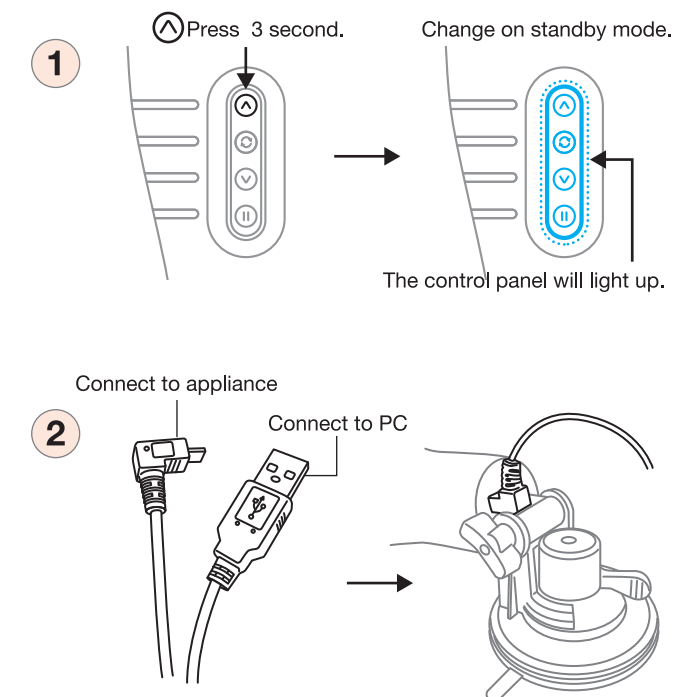 
How to use the appliance

Using connect with PC device

The device is for windows.

Using connect with PC device

- Press  button for 3 seconds to turn the power on.
- Connect PC and Cyclone X10 with using supplied USB cord.
- For the first time connecting to PC device, please wait until the Recognized Dialog messege show up. The Device Driver will be installed automatically when connecting is success.
- After all this set up done, it will automatically recognize when every time you use. So you can just connect to PC simply.



How to use the appliance

 
Using connect with PC device

The device is for windows.

Operate in software-enable

>>In case at synchronized with movie

- Enable to synchronized with movie by download 'Cyclone Plug-in' and 'synchronized data' and from CycloneX10 official web site.

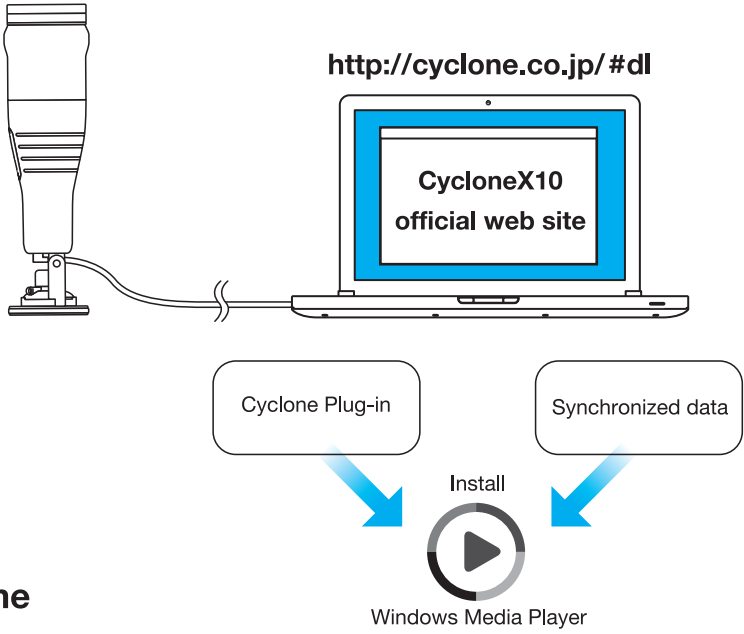

>>In case at synchronized with PC game

- Please check according to the recommended environment of each game.

A note on Video-linked function.

Video-linked function requires the environment that "Windows Media Player" can be used.

You can not be used except "Windows Media Player", because we created it as a plug-in of "Windows Media Player"

※Video-linked function is available in Media Player since version 9 on Windows XP or greater.

※Please note that DVD reproduction function is not supported for after Windows 8.

Supported Formats for Movie

Format	Filename extension
Windows Media Format	(.asf / .wma / .wmv / .wm)
Windows Media Metafile	(.asx / .wax / .wvx / .wmx / .wpl)
Microsoft Digital video recording	(.dvr-ms)
Audio Visual Interleave	(.avi)
MPEG	(.mpg / .mpeg / .m1v / .mp2 / .mp3 / .mpa / .mpe / .mpv2 / .m3u)
Musical Instrument Digital Interface	(.mid / .midi / .rmi)
Audio Interchange File Format	(.aif / .aifc / .aiff)
Sun Microsystems and NeXT	(.au / .snd)
Audio for Windows	(.wav)
CD Audio track	(.cda)
Indeo Video Technology	(.ivf)
QuickTime Movie file	(.mov)
MP4 Audio file	(.m4a)
MP4 Video file	(.mp4 / .m4v / .mp4v / .3g2 / .3gp2 / .3gp / .3gpp)
Windows Audio file	(.aac / .adt / .adts)
MPEG-2 TS Video file	(.m2ts)

After using the appliance

• Take off the suction cup after plugged-off the AC adapter from socket and the product.

→ P7・P5

 
• While charging, do not use suction cup. Charge where safety location.

→ P6・P4

Maintenance


Maintenance (controller)

- The controller is not water proof. Do not expose to water or lubricants or other liquids may cause damage
- Wipe the controller with soft, dry cloth or one that has been slightly dampened with water
- After wiping it, please rub the device with a dry cloth.

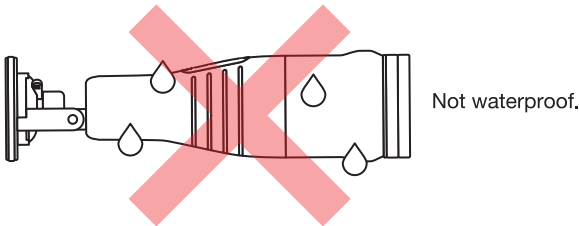

Maintenance (Cup)

 - The Cup (Inner cup/Outer cup) is washable.
- Wash the cups gently in sunning water with soap or mild detergent.
- The Inner cup made by soft material so please be careful to give damages when put on/off/ these items.

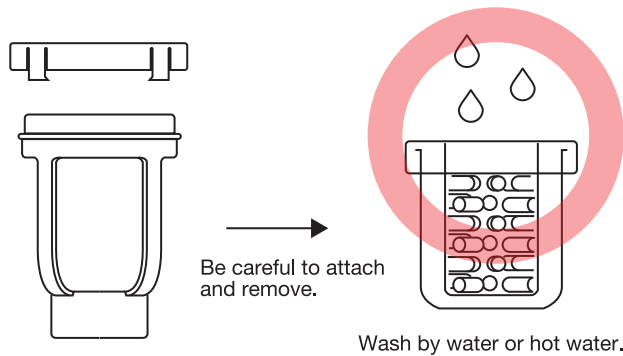

Trouble shooting

The cyclone X10 doesn't work.

- Please make sure it is full charged or AC adapter is plugged in. → P6・P3
 - Please make sure you following operation manual in collect. → P7
 - when you use while connecting with USB cable. → P7・P8
- In USB mode, It can just operate stop temporarily and turn off.

Abnormal noise / unusual smells

If abnormal smells or noises are noticed coming from the unit, turn power OFF immediately and unplug the power cord from outlet and please contact the our customer center.

Specification

Product name	Cyclone X10 USB
Distributed	WILD ONE
Manufactured	SSI JAPAN
MADE IN	CHINA
AC IN PUT	AC100-240V 50-60Hz
DC OUT PUT	8.88W
LENG	H310×W84×D84mm
WEIGHT	590g
BUTTERY	Lithium battery
FULL CHARGEING TIME	90min
CONTINUOS PLAYING TIME	120min

Contact about the Cyclone X10

Location : 2-20-12 Dogenzaka Shibuya-ku Tokyo
Zip150-0043 Japan
SSI JAPAN.Co.Ltd Cyclone X10 Customer support Center
FAX : 03-3462-9900 Mon-Fri 12:00-17:00 (no holiday)
E-mail : cyclone@ssi-japan.net
Site : <http://www.cyclone.co.jp/>
We support only by e-mail, Letter or FAX.

Gaming program

Gaming program is public domain. You can produce, distribute, and sale the program for Cyclone X10.
The sample program is downloaded by following URL.
<http://www.ssi-japan.net/download/>