


より詳しいご説明はダウンロード版をご覧ください。
ダウンロード版ご説明書→ <http://cyclone.co.jp/>

各部のなまえとはたらき

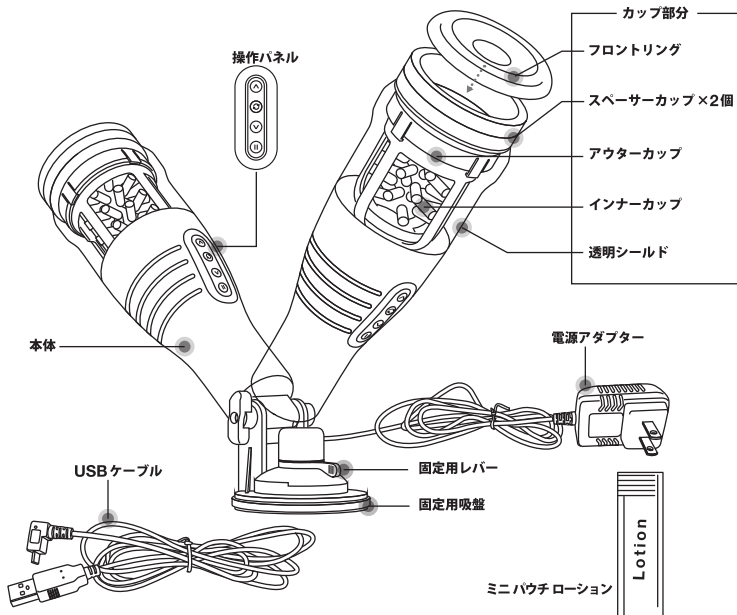

パッケージ内容

本体、USBケーブル(通信用)、電源アダプター、カップ部分(スぺーサーカップ×2個、フロントリング、アウターカップ、インナーカップ、透明シールド)、固定用吸盤、ミニーション



固定用吸盤の使い方

- ・固定用吸盤はレバーを時計まわりにスライドさせると吸着します。
- ・吸着時は非常に強力に固定されます。固定状態で無理な力を掛けないようにご注意ください。



使い方 [PC との連動方法]

PC との連動は Windows 専用となります

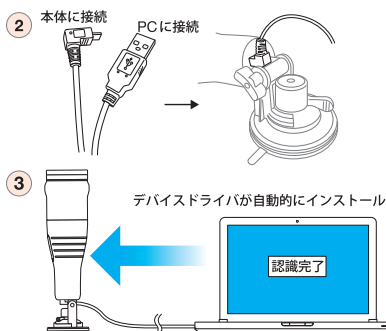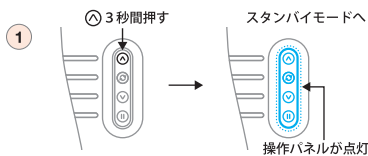

1. PC への接続

- ・電源オフ状態から「○ボタン」を3秒間押し、スタンバイモードにする。
- ・付属のUSBケーブルを用いて、サイクロンX10本体とPCを接続します。
- ・初回PC接続時にPCから正常に認識された場合、デバイスドライバが自動的にインストールされますので、認識完了のダイアログが表示されるまでお待ちください。
- ・認識完了後は本機とPCをUSBケーブルで接続するだけで自動認識しますので、対応ソフトから制御できるようになります。

2. 対応ソフトで操作する

>> 動画と連動させる場合

- ・サイクロンX10公式サイトより「サイクロンシンクロプラグイン」と「シンクロデータ」をWindows Media Playerにインストールする事で、動画に連動した動作が可能になります。

>> PCゲームと連動させる場合

- ・対応ソフトの取扱説明書をごらんください。

動画の連動についてのご注意

動画の連動機能は「WindowsMediaPlayer」が使用できる環境が必要です。

WindowsMediaPlayerのプラグインとして作成しておりますため、WindowsMediaPlayer以外では使うことができません。

※WindowsXP以上、MediaPlayerのバージョン9以降で使うことができます。

※Windows8以降のWindowsMediaPlayerではDVD再生機能が


サポートされておりません。あらかじめご了承ください。



使い方 [単体モードでの使用方法]


1. スタンバイモード

- ・「○ボタン」を3秒間押しします。
- ・操作パネルが点灯し、色が順次変化していくスタンバイモードになります。

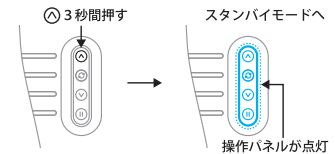


2. 回転動作を開始

- ・スタンバイモード時に「△ボタン」を押すと最低速度で回転動作を開始します。
- ・回転開始後は「△▽ボタン」を押す毎に速度が増減します。
- ・回転開始後はスタンバイモードに戻りません。回転停止したい場合は「⑪ボタン」を押して一時停止するか、→説明4
- ・「▽ボタン」を5秒間押し続け電源をお切りください。→説明5

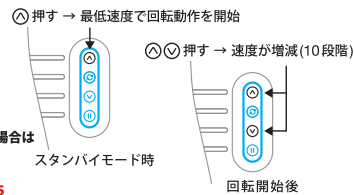


3. お好みの回転パターンを呼び出す

- ・回転動作中、「◎ボタン」を押す毎に回転パターンが変化します。
- ・回転パターンは全10種類あり、1番目から順次切り替わり、10番目の次は1番目に戻ります。

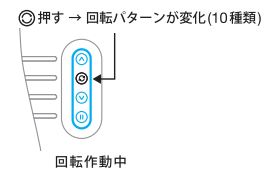

4. 一時停止をしたい場合

- ・「⑪ボタン」を押すと瞬時に一時停止します。
- ・再度「⑪ボタン」を押すことで回転動作を再開します。

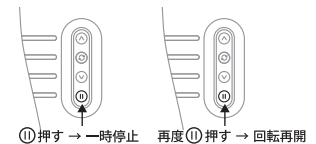

5. 電源を切る

- ・「▽ボタン」を5秒間押し続けることで電源が切れます。

注) 電源アダプター接続中は、充電が開始されている為にLEDは点灯したままとまります。



お手入れのしかた

本体

- ・本機は防水ではありません。使用後にローションがこぼれていた場合は速やかにティッシュなどで拭き取ってください。
- ・水分が本機に入り込むと故障の原因になることがあります。
- ・外装の汚れなどは薄めた中性洗剤をやわらかい布にひたし、よく絞ってから拭き取ってください。
- ・拭き取り後は、乾いたやわらかい布でからぶきしてください。

カップ部分

- ・カップ部分は水・お湯などで丸洗いができます。
- ・洗浄する際は低刺激の中性洗剤をご使用ください。
- ・インナーカップはやわらかい素材ですのでカップフレームへの着脱の際に傷を付けないようご注意ください。

仕 様

販売名	サイクロンX10 USB	寸 法	幅840 × 奥行840 × 高さ312mm
販売元	株式会社ワイルドワン	質 量	590g
製造元	株式会社エスエスアイジャパン	充 電 池	リチウム電池
製造国	中国	満充電時間	90分
電 源	AC100~240V 50-60Hz 共用	連続稼働時間	120分
定格消費電力	8.88W		

サイクロンX10本体に関するサポート・お問い合わせ先

〒150-0043
東京都渋谷区道玄坂2-20-12 SSIビル
株式会社SSI JAPAN サイクロンX10サポート係
FAX 03-3462-9900 月~金 12:00~17:00(祝祭日を除く)
e-mail: cyclonex@ssi-japan.net
サイト: <http://www.cyclone.co.jp/>
ユーザーサポートは郵便、FAX、e-mailで受け付けております。
お電話でのサポートは受け付けておりませんので、あらかじめご了承ください。

対応ツールの開発について

商業・同人・プロ・アマに関わらず、どなたでもCycloneX10対応のゲームを、許諾なしに制作・配付・販売が可能です。
サンプルプログラム(Windows実行ファイル+ソース)は、次のURLからダウンロードしてください。
<http://www.ssi-japan.net/download/>


Cyclone X10 Quick Guide

WOH-0018

Please see the download version more detailed your description.

Download version → <http://cyclone.co.jp/>

Parts identification

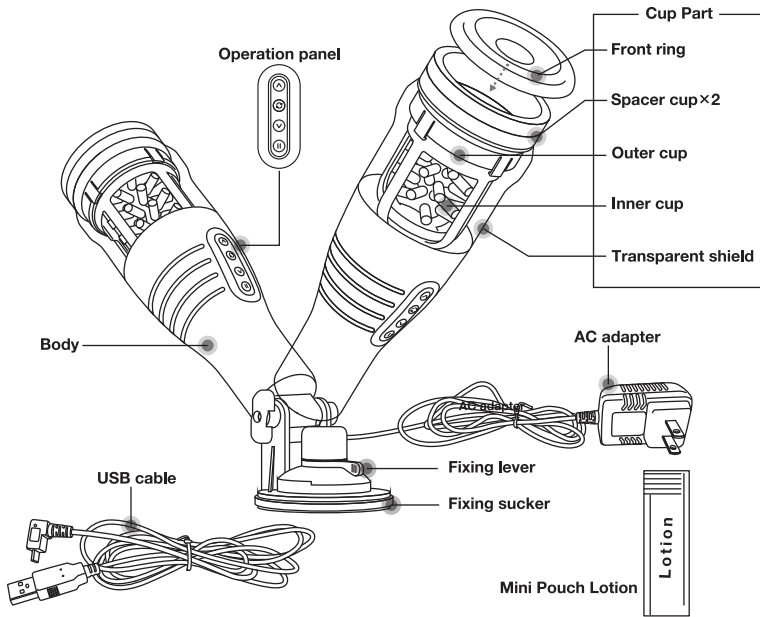


Supplied items

Body, USB cable, AC Adapter, CupPart(Spacer cup×2, Front ring, Outer cup, Inner cup, Transparent shield), Fixing sucker, Mini Pouch Lotion

Fixing sucker

- Slide clock wise for adsorb potition.
- Prevent excessive force in fixing petition

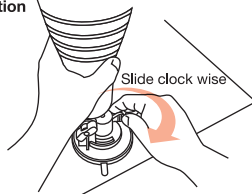

How to use the appliance [Using connect with PC device]

The device is for windows.

1. Using connect with PC device


- Press button for 3 seconds to turn the power on.
- Connect PC and Cyclone X10 with using supplied USB cord.
- For the first time connecting to PC device, please wait until the Recognized Dialog messege show up.
- The Device Driver will be installed automatically when connecting is success.
- After all this set up done, it will automatically recognize when every time you use. So you can just connect to PC simply.

2. Operate in software-enable

- >> In case at synchronized with movie
- Enable to synchronized with movie by download 'Cyclone Plug-in' and 'synchronized data' and from CycloneX10 official web site.
- >> In case at synchronized with PC game
- Please check according to the recommended environment of each game.

A note on Video-linked function.


Video-linked function requires the environment that "Windows Media Player" can be used.
You can not be used except "Windows Media Player", because we created it as a plug-in of "Windows Media Player".
※Video-linked function is available in Media Player since version 9 on Windows XP or greater.
※Please note that DVD reproduction function is not supported for after Windows 8.

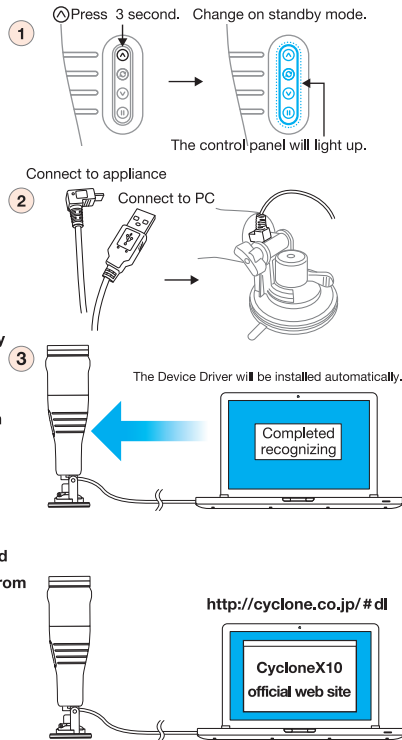

Before using the appliance [How To use the item itself]


1. Standby mode

- Press button about 3 second.
- The control panel will light up and the light color change on standby mode.

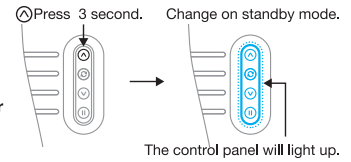


2. Start to rotation

- The Cyclone X10 starts with slow rotation when pressed button in standby mode.
- Press and control by button, to changes the rotation speed.
- Don't return standby mode in immediately after starting rotation.
- Press for stop temporarily → 4
- Long press for stop 5 seconds for stop → 5

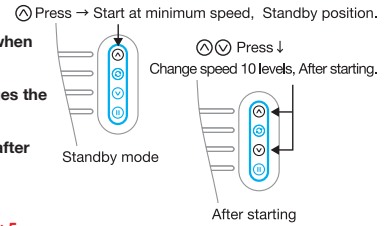


3. Various pattern of Rotation

- Press the button to change rotation patterns.
- Press button repeatedly to cycle through ten rotation pattern. (There are 10 patterns).

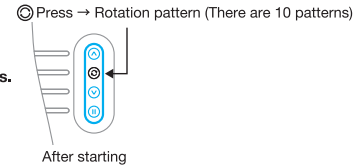


4. Pause rotation.

- Press button once to pause.
- Press again to continue.

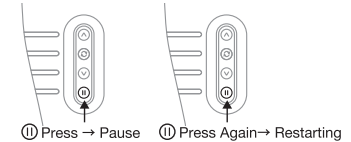

5. To Turn OFF

- The power is turned off by holding the button for 5 seconds.
- *When the AC adapter is connected, LED will remain lights up and charging is started.

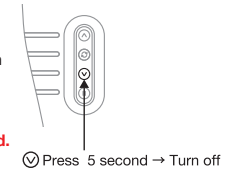

Maintenance

Controller

- The controller is not water proof. Do not expose to water or lubricants or other liquids may cause damage
- Wipe the controller with soft, dry cloth or one that has been slightly dampened with water
- After wiping it, please rub the device with a dry cloth.

Cup Part

- The Cup (Inner cup/Outer cup) is washable.
- Wash the cups gently in sunning water with soap or mild detergent.
- The Inner cup made by soft material so please be careful to give damages when put on/off/ these items.

Specification

Product name	Cyclone X10 USB	LENG	H840×840×312mm
Distributed	WILD ONE	WEIGHT	590g
Manufactured	SSI JAPAN	BUTTERY	Lithium battery
MADE IN	CHINA	FULL CHARGEING TIME	90min
AC IN PUT	AC100-240V 50-60Hz	CONTINUOS PLAYING TIME	120min
DC OUT PUT	8.88W		

Contact about the Cyclone X10

Location : 2-20-12 Dogenzaka Shibuya-ku Tokyo
Zip150-0043 Japan
SSI JAPAN.Co.Ltd Cyclone X10 Customer support Center
FAX : 03-3462-9900 Mon-Fri 12:00-17:00 (no holiday)
E-mail : cyclone@ssi-japan.net
S i t e : <http://www.cyclone.co.jp/>
We support only by e-mail, Letter or FAX.

Gaming program

Gaming program is public domain. You can produce, distribute, and sale the program for Cyclone X10.
The sample program is downloaded by following URL.
<http://www.ssi-japan.net/download/>